





PREFACE

☐ Follow the MAGURA Owner's manual— MT for your disc brake in addition to this installation instructions www.magura.com !

MARNING ... warns you about a dangerous situation which can lead to serious or fatal injury if not avoided.

NOTICE ... warns you about the risk of material damage.

BASIC SAFETY INSTRUCTIONS

★WARNING Danger of accident due to faulty or nonapproved installation work.

- Never overestimate your technical capabilities. Commission a specialist workshop for bicycles or a MAGURA service center with all installation work.
- Never make changes to your MAGURA part.
- Always observe all specified min./max. values.
- ⊙ Always use a suitable torque wrench.
- WARNING Danger of accident due to component failure or sudden brake lock-up.
- Install no more than 1 MAGURA QM adapter per brake caliper.
- Make sure that the mounting base is milled smooth, free from burrs and paint residues and are coated with corrosion protection.
- Make sure that your MAGURA QM adapter fits the disc brake rotor Ø and mounting base standard – see tables and [TD].
- Make sure that the retaining screws are always coated with fresh screwlock (medium strength) before installation.
- MAGURA QM adapters are generally fitted with an arrow when installed the arrow must point upwards (UP). Overview shows the correct installation position of the QM adapter. [A2]
- ① ① MM The adapter is screwed in combination with the brake caliper see MAGURA *Owner's manual MT* the following installation step is therefore not required.
- Tighten retaining screws (1) with tightening torque of 6 N·m (53 lbf·in). [A1]

Installing QM adapter

		Ø 140 mm	Ø 160 mm	Ø 180 mm	Ø 203 mm	Ø 220 mm
Fork	IS 2000	_	QM43	QM12	QM5	_
	PM160	_	Direct mount	QM40	QM42	_
	PM180	_		Direct mount	QM26 QM44	QM45
	PM203	_			Direct mount	_
	PM220	_		_	/ –	Direct mount
	FM140/160	- \	QM50	/	_	_
	FM160/180	- \	QM52	QM50	_	_
	10 2000		01412	00441	0140	
	IS 2000		QM12	QM41	QM9	_
	PM140	Direct mount	QM40	QM28 QM45	_	_
ıgle	PM160	_	Direct mount	QM40	QM42	_
Rear triangle	PM180	_	8 -	Direct mount	QM26 QM44	QM45
	PM203	_	0 –	/	Direct mount	_
_	PM220	- <	_ /	_	- 1	Direct mount
	FM140/160	Direct mount	QM51		-	_
	FM160/180	- ,0,	Direct mount	QM51	_	_

[TD]	PostMount - PM	Flatmount - FM		
Mounting base spacing mm	74 ^{±0.1} [PM] (A)	$70^{\pm 0.1}$ [FM-F] (B) 23.5 $^{\pm 0.1}$ (B1) · 32 $^{\pm 0.1}$ (B2)	$34^{\pm0.1}$ [FM-R] (C) $36.5^{\pm0.1}$ (C1) $\cdot 45^{\pm0.1}$ (C2)	

Download the complete manual on www.magura.com
Specifications are subject to change without prior notice!

2600576 — 10.2019 ©MAGURA 2019 All rights reserved ①Check out our worldwide partners and service centers at www.magura.com



MAGURA GROUP GERMANY www.magura.com MAGURA ASIA LIMITED CO . www.magura.com.tw

