


INSTALLING LEVER CLAMP 車把手夾鉗安裝

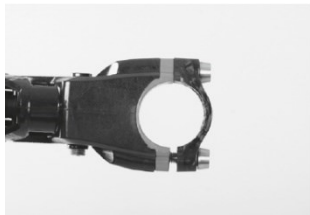

MAGURA



ATTENTION! Check the correct position of the clamp, take a look on the arrow, Carbolay clamp thick side on top.

注意！安裝前必須確認夾鉗正確的安裝位置，依照夾鉗上所標示的箭頭方向進行安裝，Carbolay 夾鉗則是較厚的一端安裝在上方。



Set the brake lever retaining nuts and fix the upper nut with 3 Nm then the lower nut with 3 Nm.

使用固定螺絲將夾鉗固定到車把手上，以 3Nm 扭力值先鎖緊上方螺絲，再同樣以 3Nm 扭力值鎖緊下方螺絲。

Download the complete manual on www.magura.com 欲下載完整版手冊，請上官方網站 www.magura.com

Specifications are subject to change without prior notice! 規格如有變更，恕不另行通知！



MAGURA

德國瑪古拉企業集團

瑪古拉亞洲有限公司

MAGURA GROUP GERMANY

MAGURA ASIA LIMITED CO.

www.magura.com

www.magura.com.tw